



PQRCUDS0

Appearance		Functions (Button Descriptions)			
	No.	Name	Function		
	1	Operation Display Panel	Display the operating condition.		
	2	Indoor TemperatureButton	Used to check the room temperature		
	3	Fan Speed Button	Used to set the desired fan speed.		
	4	Fan/Plasma/Swirl SwingButton	Fan: used to circulate room air without cooling orheating		
			Plasma : use plasma function.		
			Swirl Swing : use swirl swing		
	5	Automatic / Power Saving/	Automatic : used to set mode by room temperatureautomatically		
		Vane Control Button	Saving : use to save the power.		
			vane control : used to set louver angle		
2 ROOM FAN MODE SUB SPECIAL 13	6	Reservation Mode Button	used to set reservation		
	7	Date Selection Button	used to set Data for current time and reservation.		
	8	Hour/Minute Button	used to set hour and minute for current time and reservation.		
6 INTER WEEK HOUR OFF SET CACE C	9	Mode Selection Button	used select the operation mode.		
		On/Off Button forreservation	Operation starts and stop.		
	11	Temperature ControlButton	Used to set the temperature when required.		
918	12	On/Off Button	Operation starts and stop		
10 19	13	Special Function Button	used to use Special Function		
20	14	Dehumidification/ Heating/	Dehumidification : used to operate fordehumidification.		
		Timer Button	Heating : used to operate heater when the heating.		
			Go-OUT; use to operate when user go outs.		
		SUB Function Button	used to select Function		
		Simple ReservationButton	Used to set simple reservation.		
	17	Unsetting Button	cancel the all reserved time.		
	18	Heating/Ventilation/Elevation	heating: used to set heating mode.		
		GrillButton	ventilation: used to set ventilation		
		0. <i>11</i> . D. 11	Elevation Grill: used to		
		Setting Button	used to set the reservation when the reservation.		
	20	Cooling / Auto Swing /	Cooling : used to set cooling mode		
		Child LockButton	Auto Swing : used to swing the louver up and down		
			child Lock: : used that children can not use thecontreller		

PQRCUSA0 (Applied : CST, DUCT, RAC, CVT)

Appearance	Functions (Button Descriptions)			
	No.	Name	Function	
	1	Operation display panel	- Display the operating condition.	
/14A.D	2	Temperature control button	- Used to set the temperature when required.	
	3	Wireless remote controller receiver	- Some products do not receive wireless remote controller signal.	
	4	Ventilation button	 Ventilator control function can only be set for the product with the ventilation function. 	
	5	Operation selection button	- Used to select the operation mode.	
(∰ ® Ø () () () () () () () () () () () () ()	6	Additional operation button	- Used to select the additional operation mode. *Air cleaner, Heater, Humidifier, Auto fan	
3 Remote Controller	7	Function setting button	- Used to set the function and into the installer setting mode. * Function : Wind angle, Child lock, Elevator grill	
4 10	8	Exit button		
	9	Operate/Stop button	 Operation starts when this button is pressed, and stops when the button is pressed again. 	
	10	Indoor temperature button	- Used to check the room temperature	
	11	Fan speed button	- Used to set the desired fan speed	
815	12	Wind direction button	- Used to set the direction of wind	
	13	Reservation/time setting button	- Used to set the Time and Program. * Program : simple, Sleep, ON/OFF, Weekly, Holiday	
	14	Set/Cancel button		
	15	Up/Down/Left/Right button		

1.2 Wireless Remote Controller H/P:PQWRHSF0

		•
H/P:PQWRHSF0 C/O:PQ	NR	CSF0
Appearance	Fu	nctions (I
	No.	Nar
	1	Start/Stop
Signal transmitter	2	Operation Selection
	3	Room temp Setting
	4	Fan Speed Selector
	5	Jet Cool
	6	Chaos Swi
	7	On/Off Tim
	8	Time Settir
	9	Timer Set/
	10	Sleep Mod
14	11	Air Circulat
	12	Room Terr Checking
Flip-up door (opened)	13	Plasma(Opti
	14	Reset Butt
	15	2nd F Butt
	16	Auto Clean

	Functions (Button Descriptions)				
No. Name		Name	Function		
	1	Start/Stop	Operation starts when this button is pressed and stops when the button is pressed again.		
gnal transmitter	2	Operation Mode Selection	Used to select the operation mode.		
	3	Room temperature Setting	Used to select the room temperature.		
	4	Fan Speed Selector	Used to select fan speed in four steps (low, medium, high, or CHAOS.)		
	5	Jet Cool	Used to start or stop the speed cooling/heating. (Speedcooling/heating operates super high fan speed in cooling mode.)		
1	6	Chaos Swing	Used to stop or start louver movement and set the desired up/down airflow direction.		
3	7	On/Off Timer	Used to set the time of starting and stopping operation.		
10	8	Time Setting	Used to adjust the time.		
9	9	Timer Set/Cancel	Used to set the timer when required and to cancel the Timer operation.		
16	10	Sleep Mode Auto	Used to set Sleep Mode Auto operation.		
12		Air Circulation	Used to circulate the room air without cooling or heating (turns indoor fan on/off).		
	12	Room Temperature Checking	Used to check the room temperature.		
Flip-up door (opened)	13	Plasma(Optional)	Used to start or stop the plasma-purification function.		
	14 Reset Button	Used prior to resetting time or after replacing batteries.			
	15	2nd F Button	Used prior to using modes printed in blue at the bottom of buttons.		
	16	Auto Clean	Used to set Auto Clean mode.		
	15	2nd F Button	Used prior to using modes printed in blue at the bottom of buttons.		

H/P:PQWRHDF0 C/O:PQWRCDF0

Appearance		Fu	nctions (Button De	
		No.	Name	Function
	1		On/Off	Operation starts when this button is pressed and stops when the button is pressed again.
Signal transmitter	2	Ø	Operation Mode Selection	Used to select the operation mode.
	3	TEMP	Room temperature Setting	Used to select the room temperature.
	4		Fan Speed Selector	Used to select fan speed in four steps (low, medium, high, or CHAOS.)
	5	JET COOL	Jet Cool	Used to start or stop the speed cooling. (Speedcooling/heating operates super high fan speed in cooling mode.)
	6	AIR FLOW	Air Flow Direction Selection	Used to stop or start louver movement and set the desired up/down(chaos swing) & left/right airflow direction.
	7	E HESSEC	Timer & Time Setting	Used to select desired timer of sleep/on/off timer or used to set the current time (push for 3 sec.)
JET COOL A FAN SPEED			Timer & Time Setting	Used to adjust the time when set the timer or current time.
		SET	Timer Set/Clear	Used to set timer or clear the selected timer.
			Timer all Clear	Used to clear all timer operation.
9 11 13 7,9 CLAMAL CLAMAL CLAMAL 14	8	1	Room Temperature Checking	Used to check the room temperature.
	9	۵.	Auto Clean & Smart Clean (Optional)	Used to set Auto Clean mode or Smart Clean mode. - Set AUTO CLEAN : Push 1 time and Set button. - Set SMART CLEAN : Push 2 times and Set button.
	10		Plasma(Optional)	Used to start or stop the plasma-purification function.
	11		Lighting(Optional)	Used to control lightness of display of Indoor unit.
	12	() 0	Energy-Saving Cooling Operation (Optional)	Used to start or stop the energy saving cooling operation.
	13	e (Smart Clean (Optional)	Used to start or stop smart clean mode when operation stops.
	14	RESET	Reset Button	Used prior to resetting time or after replacing batteries.

MULT V-net